



Dual Float Float Valve Installation Instructions

Philmac
TANK
PHIL



1
Unscrew bolt and remove lever from the float valve body.



2
Apply PTFE thread tape or approved sealant to the thread ensuring enough is applied to ensure a water tight seal.



3
Screw in the float valve body by hand only until firm and in the vertical position.



4
Attach both 6" Philmac floats to the lever.



5
The lever has ratchet slots for adjusting and locking the float at suitable level for your tank.



6
Insert the bolt and tighten with a shifter. The bolt can be loosened to make adjustments to the water level. Float valve is now fully installed.