



## Dual Lever Installation Instructions

**Philmac**  
**TANK**  
**PHIL**



Remove both levers from the float valve body. Upper lever, remove fastening bolt.



Lower lever unscrew.



Apply PTFE thread tape or approved sealant to the thread ensuring enough is applied to ensure a water tight seal.



Screw in the float valve body by hand only until firm and in the vertical position.



Attach the 6" Philmac floats to each of the levers.



Attach the lower lever first by screwing the lever into the cam.



# Dual Lever Float Valve Installation Instructions

**Philmac**  
**TANK**  
**PHIL**



Then attach the upper lever which has ratchet slots for adjusting and locking the float at suitable level for your tank.



Insert the bolt and tighten with a shifter. The bolt can be loosened to make adjustments to the water level.



Float valve is now fully installed.

## Additional Installation Information

Valve must be installed horizontal and firmly mounted at least 100mm from inside of tank wall. Arms need to be adjusted as per diagram and never bent. Occasionally lubricate plunger 'O' - Ring with silicone grease.

